


ESD Mats

Eliminate static from your work area

– All materials meet ANSI/ESD S20.20 requirements.

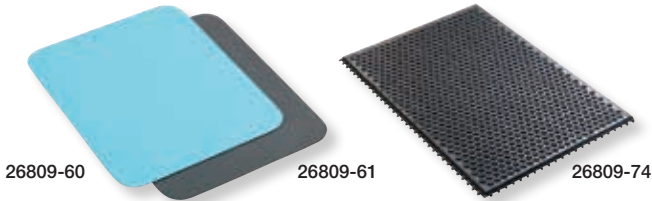

Statfree® Type T2 Benchtop Mats with superior heat-, chemical-, and wear-resistance. Two layers of 100% nitrile butadiene industrial-grade rubber; the top layer is dissipative and the bottom layer is conductive.

Statfree® Type i Floor Mat Kit interlocks to large areas. Features conductive rubber construction and an ergonomic dome/support cell structure design.

Specifications

Compliance: ANSI/ESD S20.20

Statfree material type	Dimensions (L x W x thickness)	RTG (Ω)	Package	Catalog number	Price
Benchtop mats					
T2, blue	48" x 24" x 1/16"	10 ⁶ to 10 ⁸ dissipative	Mat kit	GY-26809-60†	
T2, gray	(122 x 61 x 0.2 cm)			GY-26809-61†	
T2, blue	480" x 24" x 1/16"	side/ <10 ⁴ conductive side	Roll	GY-26809-62	
T2, gray	(1219 x 61 x 0.2 cm)			GY-26809-64	
T2, blue	480" x 36" x 1/16"		Roll	GY-26809-63	
T2, gray	(1219 x 91 x 0.2 cm)			GY-26809-65	
Floor mats					
i	36" x 24" x 1/2" (91 x 61 x 1.3 cm)	10 ³ to 10 ⁵	Mat kit	GY-26809-74††	

†Includes ground kit 26809-66 ††Includes snap kit 26809-68

[GY-26809-66](#) Wrist strap/bench mat common ground kit.

Includes common point 15-ft (4.6-m) ground cord, resistor with 10-mm snap stud, and universal snap kit 26809-68

[GY-26809-68](#) Universal snap kit. Includes one 10-mm male stud, one 10-mm female socket, and one long and one short screw

[GY-26809-76](#) Floor mat ground kit. Includes 15-ft (4.6-m) ground cord, resistor with 10-mm snap stud, and snap kit 26809-68

ESD Static-Dissipative Waste Basket

Protect against ESD in your clean room

High-density Polyethylene Waste Basket contains no carbon, dyes, or additives. Will not tribogenerate, and will dissipate static electricity. Measures 10⁸ to 10¹² ohms for surface resistance.

Antistatic Liners are perfect for static sensitive areas where electrostatic contamination is a problem. Pink tinted antistatic polyethylene (1.5 mL) with a surface resistivity of < 10¹² Ohms/sq. (ASTM-D-257). Provide a static decay rate of 5 kV-0 Volts < 2 seconds.



Description	Approx. volume	Catalog number	Price
ESD waste basket	11 gal. (41.6 L)	GY-20028-13	
Antistatic liner, pk of 50	—	GY-20028-14	

Compact Static Charge Meters

Re-zero between measurements in a flash

– Measure the magnitude and polarity of electrostatic fields produced by charged objects



Analog meter
17797-30

Digital meter
with output
37715-70

Analog Meter: Use low setting below 3000 volts for higher resolution, or high setting for readings to 30,000 volts. “Quick zero” function re-zeros meter for repetitive measurements.

Digital Meter with Output: HOLD button freezes current reading. Easily zero the meter with the turn of a knob. Output lets you permanently record your results.

What's included: one 9 V battery. Digital meter 37715-70 also includes a carrying case.

Type	Range	Output	Catalog number	Price
Analog	0 to 30,000 V	—	GY-17797-30	
Digital	0.00 to ±19.99 kV at 1"	10 mV/kV	GY-37715-70	

[GY-09376-04](#) Replacement batteries, 9 V. Pack of 4

Ionizing Air Gun

Blast away dust held by static electricity

- NIST-calibrated units
- Helps avoid manufacturing or handling problems
- Emitter on nozzle produces positive and negative ions to neutralize specific areas
- Adjustable air pressure from 0 to 100 psi



What's included: controller, 7 ft (2 m) hose, air gun nozzle, NIST-traceable calibration report provided by the manufacturer, and 7½-ft (2.2-m) cord with IEC connector.

Operating pressure	Air usage	Connection	Power (50/60 Hz)	Catalog number	Price
5 to 100 psi	3.5 cfm at 30 psi	1/8" NPT(M) air fitting	120 VAC	GY-26809-54	